


Sidewalk Sign

ASSEMBLY INSTRUCTIONS

Line up the insertion hole of the foot with the foot locking mount on the sign frame. Slip the foot onto the frame and turn to snap into place.

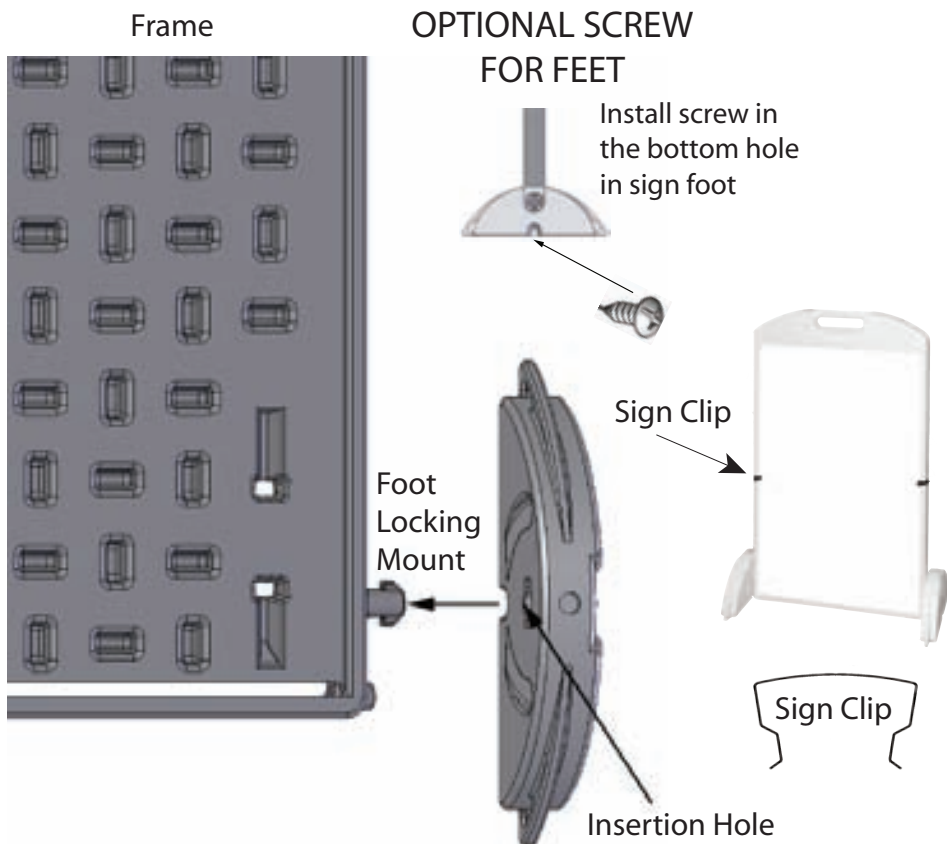

Fill each foot, before assembly, with up to 5.6 lbs. of sand. For ease of filling, play sand is recommended. Water may be used at temperatures above freezing.

As an option, after you have placed your signs in the frame, you can place one sign clip in the middle of each side to secure the signs. These clips can also be screwed into the sides of the frame.